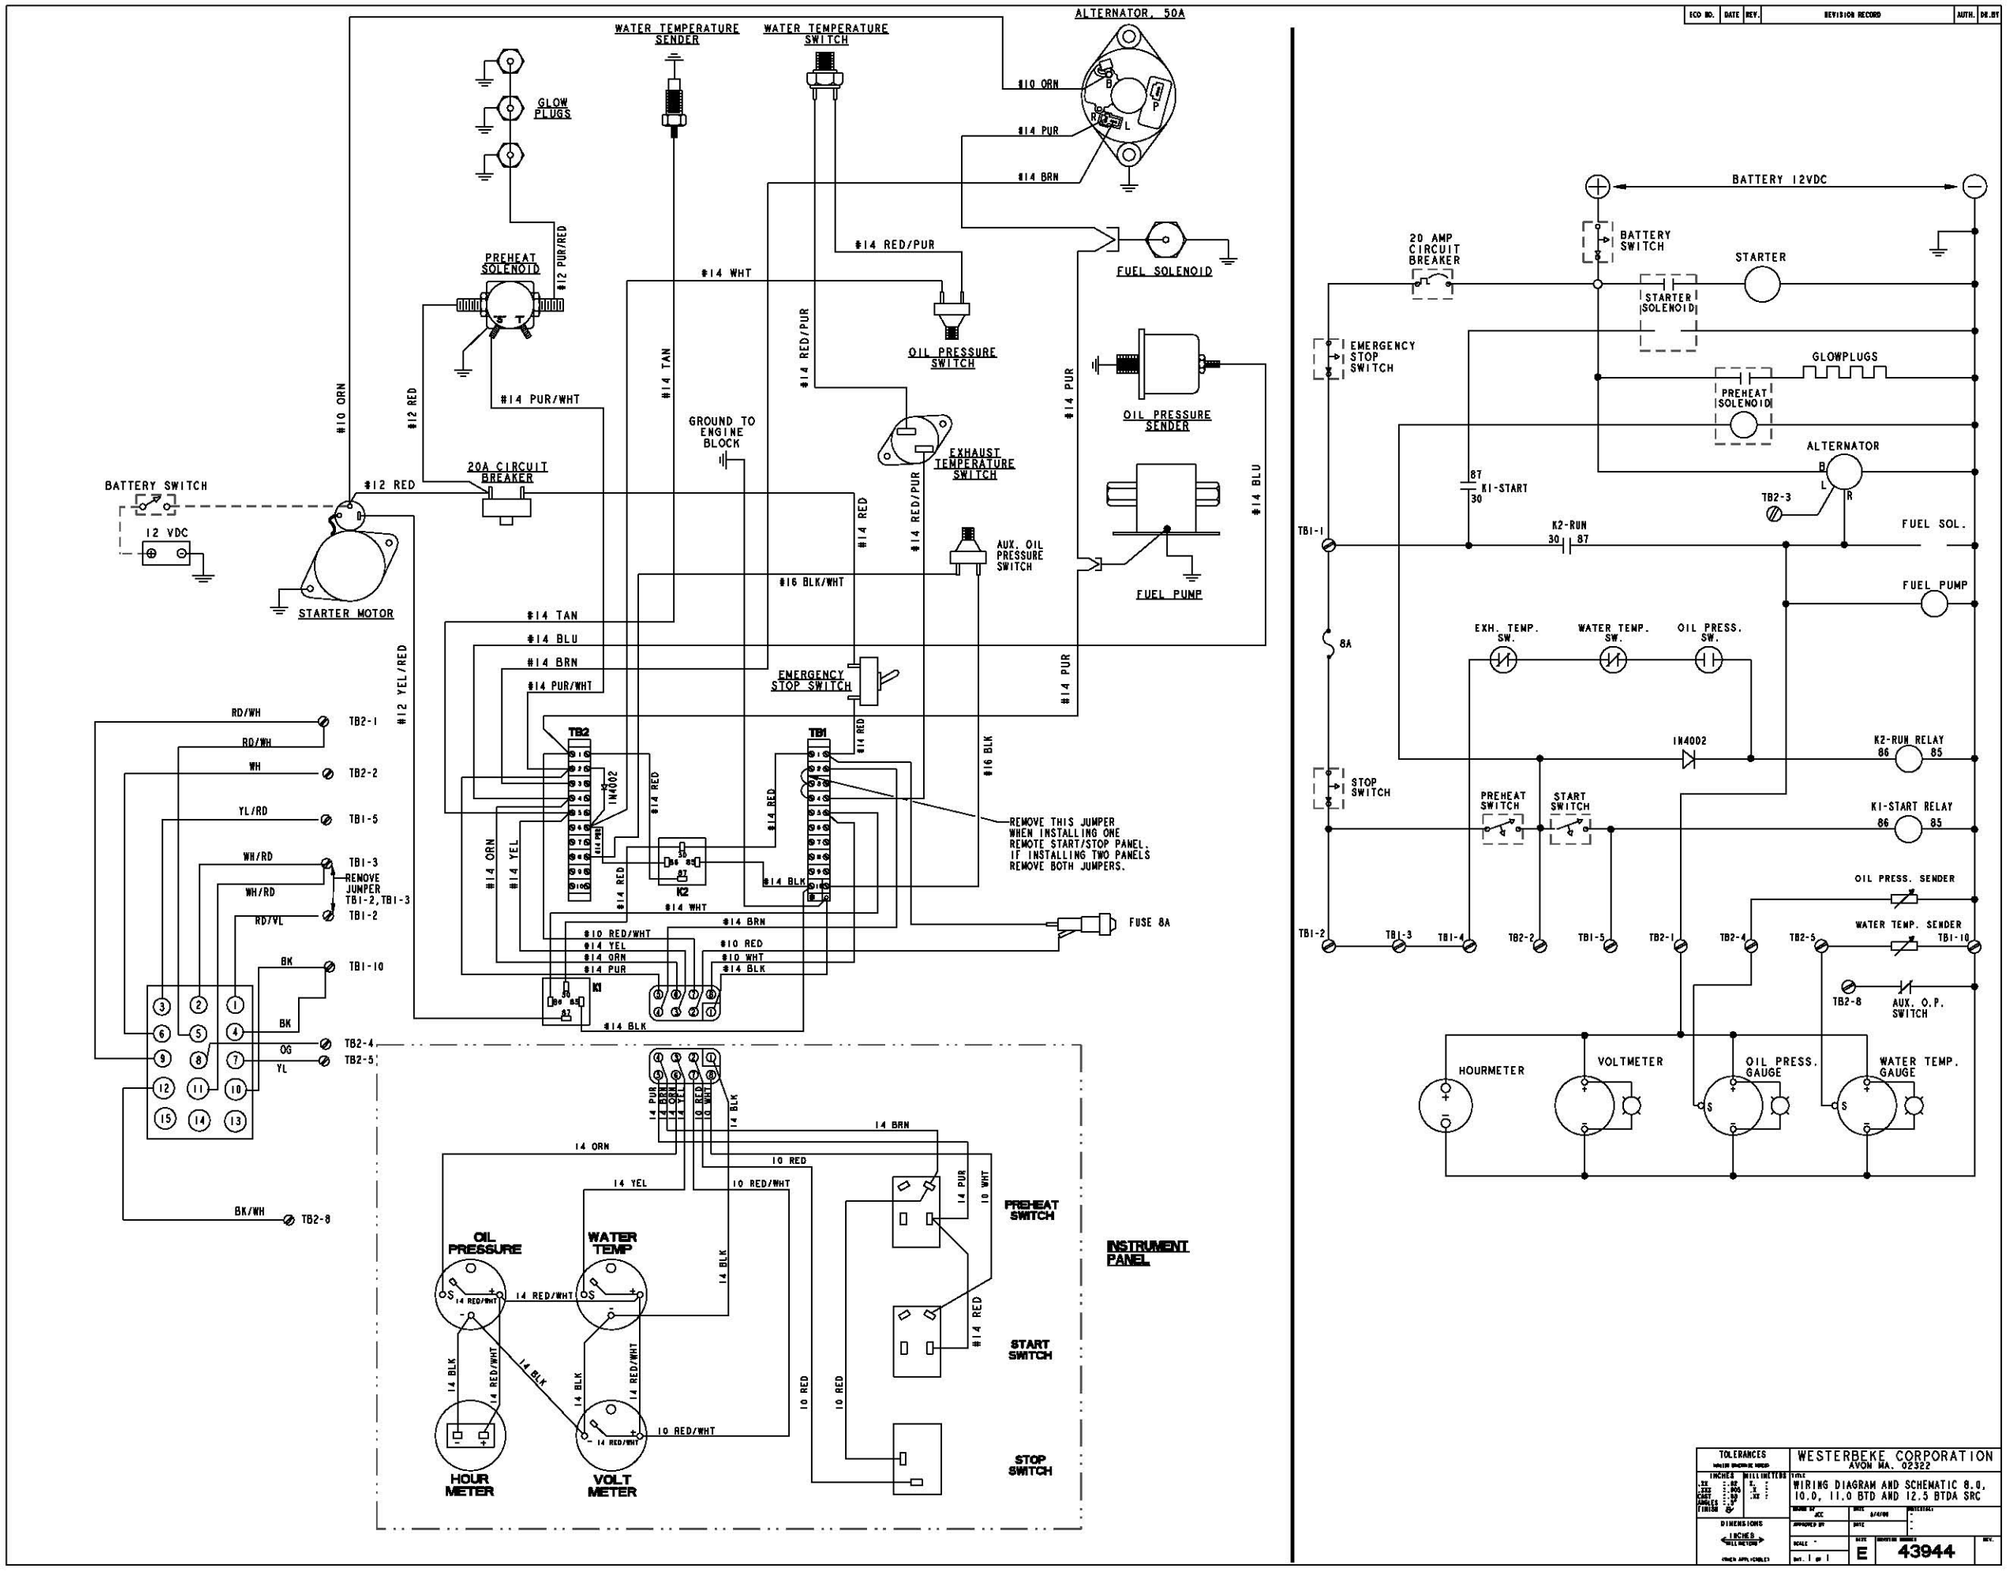

ECO NO.
DATE
REV.
REVISION RECORD
AUTH.
DR.BY
WATER TEMPERATURE SENDER
WATER TEMPERATURE SWITCH
ALTERNATOR, 50A
GLOW PLUGS
PREHEAT SOLENOID
FUEL SOLENOID
OIL PRESSURE SWITCH
OIL PRESSURE SENDER
EXHAUST TEMPERATURE SWITCH
GROUND TO ENGINE BLOCK
20A CIRCUIT BREAKER
BATTERY SWITCH
12 VDC
STARTER MOTOR
AUX. OIL PRESSURE SWITCH
FUEL PUMP
EMERGENCY STOP SWITCH
TB2
TB1
K2
K1
REMOVE THIS JUMPER WHEN INSTALLING ONE REMOTE START/STOP PANEL. IF INSTALLING TWO PANELS REMOVE BOTH JUMPERS.
FUSE 8A
REMOVE JUMPER TB1-2, TB1-3
OIL PRESSURE
WATER TEMP
HOUR METER
VOLT METER
PREHEAT SWITCH
START SWITCH
STOP SWITCH
INSTRUMENT PANEL
BATTERY 12VDC
20 AMP CIRCUIT BREAKER
BATTERY SWITCH
STARTER
STARTER SOLENOID
EMERGENCY STOP SWITCH
GLOWPLUGS
PREHEAT SOLENOID
ALTERNATOR
K1-START
K2-RUN
FUEL SOL.
FUEL PUMP
EXH. TEMP. SW.
WATER TEMP. SW.
OIL PRESS. SW.
1N4002
K2-RUN RELAY
K1-START RELAY
STOP SWITCH
PREHEAT SWITCH
START SWITCH
OIL PRESS. SENDER
WATER TEMP. SENDER
AUX. O.P. SWITCH
HOURMETER
VOLTMETER
OIL PRESS. GAUGE
WATER TEMP. GAUGE
TOLERANCES
WESTERBEKE CORPORATION
AVON MA. 02322
WIRING DIAGRAM AND SCHEMATIC 8.0, 10.0, 11.0 BTD AND 12.5 BTDA SRC
E
43944